


# FITTING INSTRUCTIONS FOR FIREBACKS TO B.S. 8303:1994

## WARNING!

Before lighting first fire ensure that fireback and filling are completely dry. First fire should be small and gradual (Very small flames).

DO NOT use flammable materials (e.g. plastic packaging, fine sawdust or kindling). This is to avoid problems caused by thermal shock.

Cracks in the fireback are liable to occur at any time, but unless they develop into larger cracks, or cause disintegration of the fireback, they are not serious.

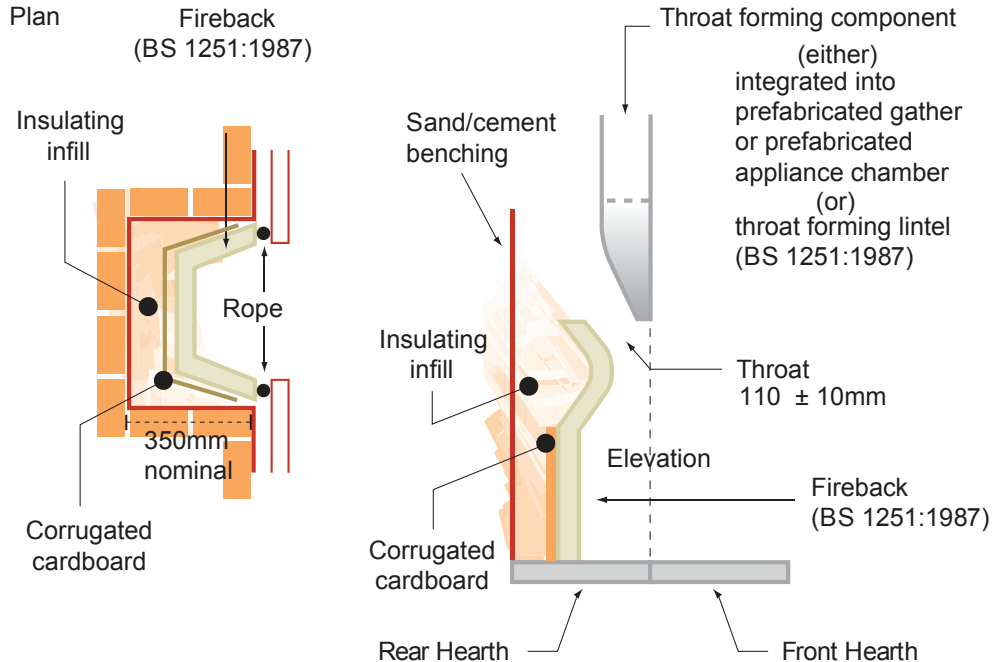

**ALWAYS USE A FIREGAURD AND SUPERVISE.**