




**Step 01** Ensure chimney is trimmed all round, felt is dressed up stack & lay tiles to front of stack

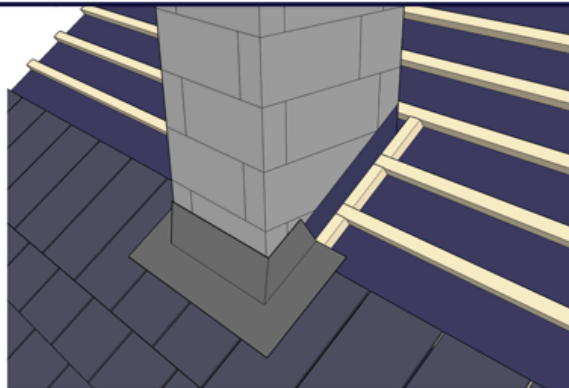


**Step 02** Fix front prefabricated Apron & ensure the apron is fitted flush to the tile/slate face

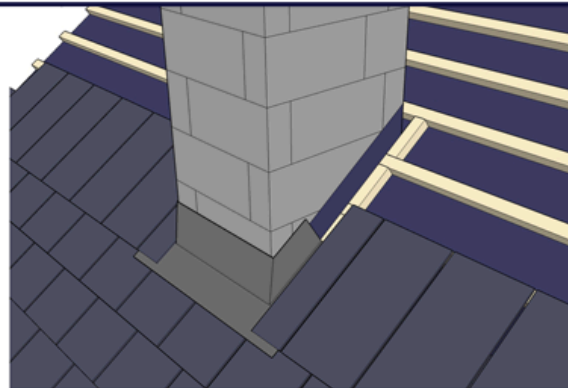


**Step 03** Dress in next course of tile/slate as per manufacturer.

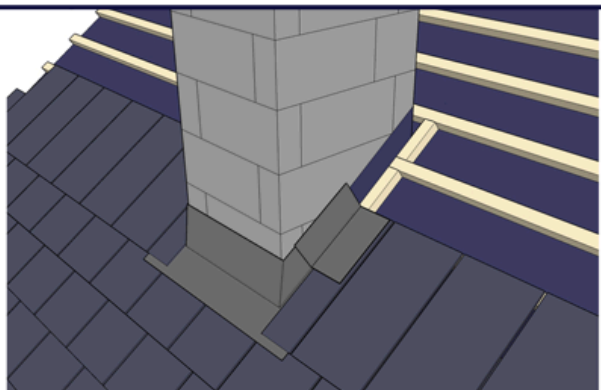


**Step 04** Fix first prefabricated soaker, with hidden nail detail to slate battens insuring adequate lap

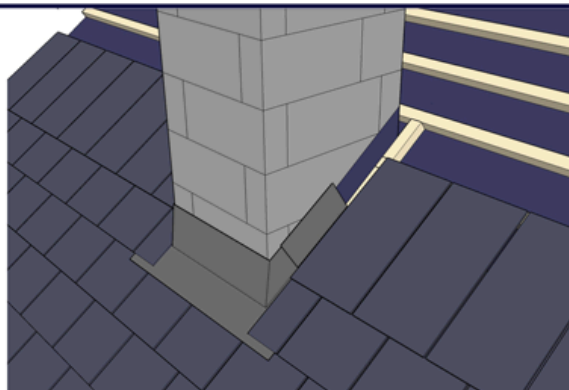


**Step 05** Dress in next course of tile/slate as per manufacturer, insuring snug fit to soaker

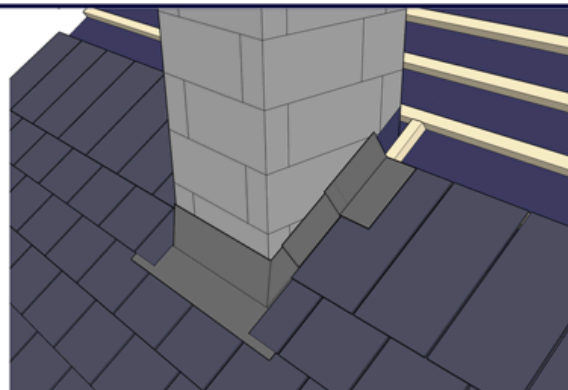


**Step 06** Repeat Steps 04 & 05 as required to finish the side cover of the stack

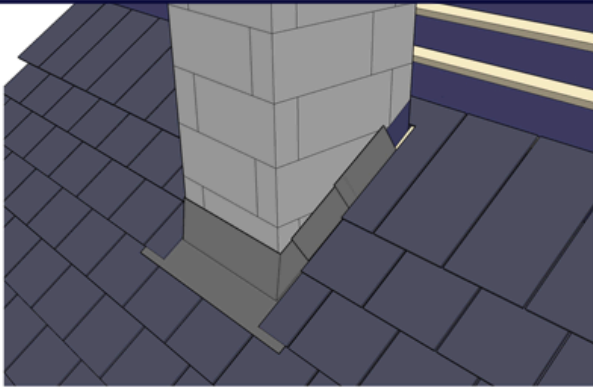


**Step 07** Dress last course of tiles to top of Stack.

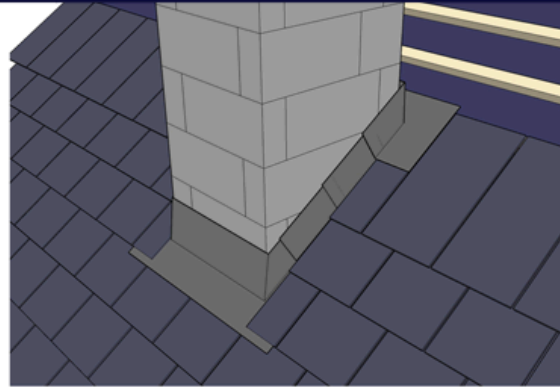


**Step 08** Fix back prefabricated Apron, ensuring a firm flush fit with the upper slate face

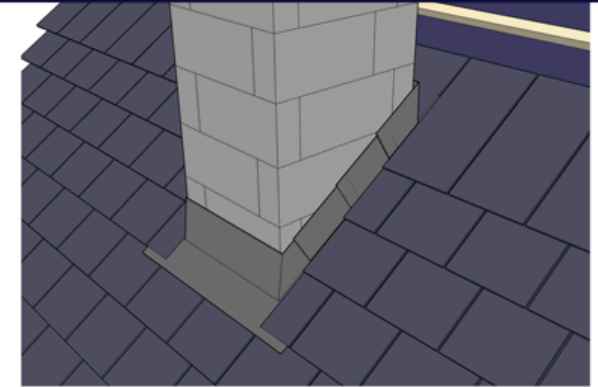


**Step 09** Fix next tile/slate course, ensuring adequate cover

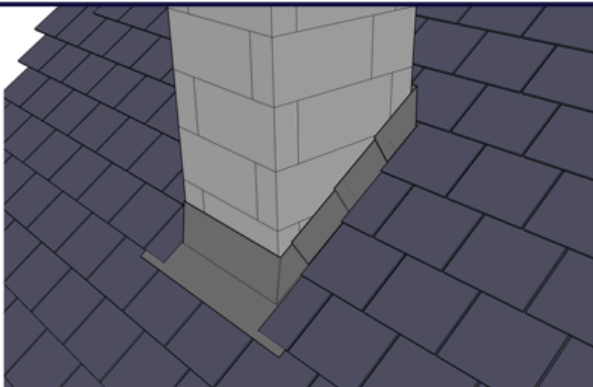

**Step 10** Finish remaining roof slating

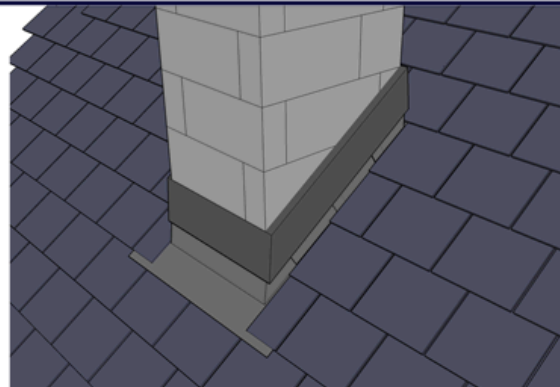

**Step 11** Fix additional 150mm wide strip 5lb. lead counter flashing, fixed to blockwork

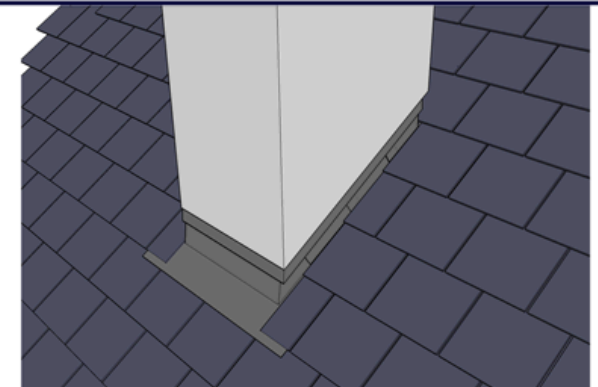

**Step 12** Apply plaster finish of stack using plaster beading as required